


LEAK-B-GONE™

PVC LEAK STOPPER RING

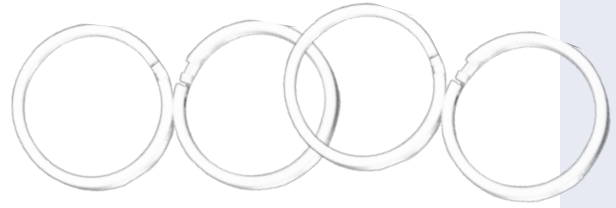

Installation Instructions:

It is advised to work rapidly as cement sets quickly. Primer and cement are harsh and may cause irritation to the skin, please use proper protection. Use primer and cement in well ventilated areas.



1. Dry off leaking area completely above and below joint.

2. Apply an even coat of primer and let dry. Then apply a liberal coat of cement around the pipe at the leaking joint.

3. Spread open the Leak-B-Gone ring and place it around the pipe below the leaking area and away from cement.

4. Squeeze (snap) Leak-B-Gone ring closed. Slide and turn all the way to the leaking area until ring is making contact with the joint.

5. Hold for 30 seconds to allow cement to dry before turning on water.

Caution: Do not use Leak-B-Gone on bath-room or kitchen "P-Traps" or compression fittings.



Leak



Leak-B-Gone

3/4" PVC Leak Stopper Ring

Catalog #	Selling Unit
45015	10 Pieces per bag

1" PVC Leak Stopper Ring

Catalog #	Selling Unit
45020	10 Pieces per bag

1 1/4" PVC Leak Stopper Ring

Catalog #	Selling Unit
45025	10 Pieces per bag

1 1/2" PVC Leak Stopper Ring

Catalog #	Selling Unit
45030	10 Pieces per bag

2" PVC Leak Stopper Ring

Catalog #	Selling Unit
45035	10 Pieces per bag

3" PVC Leak Stopper Ring

Catalog #	Selling Unit
45040	10 Pieces per bag

4" PVC Leak Stopper Ring

Catalog #	Selling Unit
45045	10 Pieces per bag



Patents Pending. All other trademarks, U.S. & Foreign Patents Pending apply. All Rights Reserved.

TESTED TO 200 PSI

50100-68 REV A 12/08

www.kinginnovation.com

(P) 800.633.0232

(F) 636.519.5410